 


OPERATION

- Ensure the mains socket is switched off and the **Steam Dial** is at "MIN" position.
- Fill the iron with water as described above.
- Place the iron on its heel on the ironing board rest and connect the mains cable to the mains socket.
- The **Temperature Indicator** will illuminate.
- Select the correct temperature by turning the **Temperature Dial**.

Turn clockwise to reduce and anticlockwise to increase temperature.

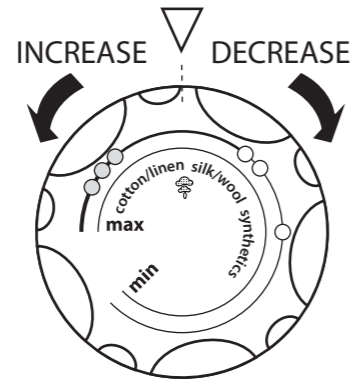


- Some parts have been lightly greased and the iron might smoke slightly when switched on for the first time. After a short while, this will cease. We recommend passing the iron over a clean cotton cloth before using it for the first time. The Temperature Indicator will go off when the indicated setting reaches the correct temperature. The iron is now ready for use. During use the indicator will light on and off as the thermostat maintains the iron at the correct temperature setting.
- In between operations and when filling the iron always stand the iron on its heel. NEVER leave the iron face down.

STEAM IRONING

Steam ironing should be carried out at the highest settings on the **Temperature Dial**. Steam ironing at lower temperatures may cause water to leak from the soleplate.

The quantity of steam is regulated by the **Steam Dial**. Move the steam selector to a suitable position depending on the quantity of steam required and the ironing temperature.

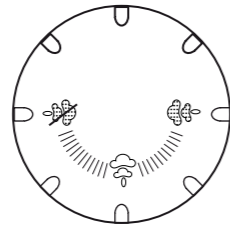


For dry ironing there is no need to fill the water reservoir.

SPRAY BUTTON

Press the **Spray** button to spray water on the material during ironing.




- To avoid staining, do not use the spray on silk or synthetics, and be very careful when you iron delicate fabrics.
- For spray and shot of steam functions to operate, the **water reservoir** must be at least one-quarter full. If these features stop working, refill the **water reservoir**.

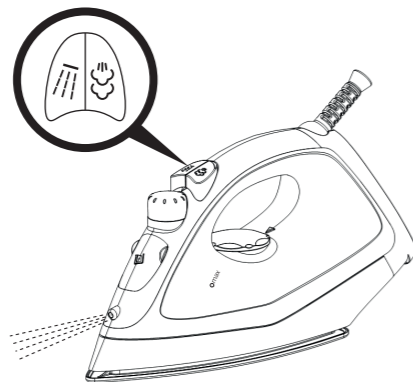

GB-4

TIPS


- In between ironing always stand the iron in the upright position. NEVER leave the iron face down.
- After you have finished ironing, unplug the iron from the mains socket. Stand the iron in its upright position and allow it to completely cool down.

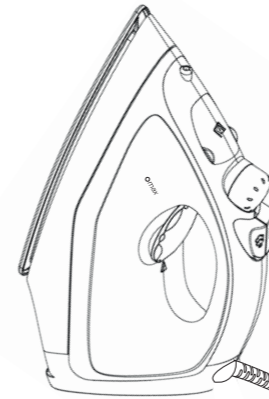

AFTER YOU HAVE FINISHED IRONING

Turn the **Temperature Dial** to **min** position and unplug. Stand the iron on its heel and let the iron completely cool down.

When the iron is cool:
Invert the iron and pour away the excess water from the reservoir. When pouring away the water, gently shake the iron to remove any loose particles from the reservoir.

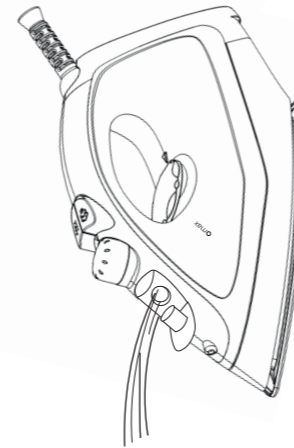

SPECIFICATIONS

Voltage Rating: 230V~50Hz
Power Consumption: 1200W

We continually strive to improve our products. Specifications may change without prior notice.

Currys.co.uk

All the support you need.

Whether it's a tech emergency or you need plain good advice, we're always on hand to help.
UK: 0344 561 1234
IRE: 1890818 575

Partmaster
CO.UK

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit

www.partmaster.co.uk or call 0344 800 3456 (UK customers only) Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

DSG Retail Ltd. (co. no. 504877)
1 Portal Way, London, W3 6RS, UK

EU Representative
DSG Retail Ireland Ltd (259460)
3rd Floor Office Suite, Omni Park SC
Santry, Dublin 9, Republic of Ireland

GB-5

QSG-C12IR13-190917V4

ESSENTIALS INSTRUCTION MANUAL

1200 WATT IRON

C12IR13



Thank you for purchasing your new Currys Essentials 1200 Watt Iron.

We recommend that you spend some time reading this instruction manual in order to fully understand all the operational features it offers.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Currys  PC World

SAFETY FIRST!

Please follow all the safety precautions listed below for safety and to reduce the risk of injury or electrical shock.

- Read all the instructions before operating the appliance and keep them for future reference. If you pass the product on to a third party, include these instructions.
- Unplug the iron from the mains socket when not in use, and before emptying, filling, or cleaning.
- Do not touch the soleplate of the iron if it is hot.
- Always hold the appliance by the handle.
- Keep the appliance well away from surfaces and objects that can be damaged by heat.
- Ensure there is adequate room to operate the iron.
- Ensure that the iron cannot fall into water.
- Do not immerse the mains cable in any liquid.
- Do not let the mains cable overhang the edge of the work surface or allow it to touch hot surfaces or sources of heat or flame.
- If any part of this appliance is damaged or malfunctions in any way, or the mains cable or mains plug is broken, do not continue to use it. Seek expert assistance.
- The iron must not be used if dropped, if there are visible signs of damage or if it is leaking.
- This appliance can be used by persons aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instructions concerning the use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance.
- Cleaning and user maintenance should not be made by children unless they are older than 8 years and are supervised.
- Parents must warn children not to touch hot appliance parts. Close supervision is necessary when an appliance is used near children.
- When not ironing never leave the iron face down. Stand it upright on its heel, on a level heatproof surface.
- The iron must be used and rested on a stable surface.
- When standing the iron in an upright position ensure that the surface is flat and stable.
- Do not use outdoors or in damp or wet conditions.
- Do not use this iron for professional laundry services.
- Do not use this appliance for any purpose not covered by the instructions.
- Do not turn the iron upside down, there may be hot water in the water tank.
- Use this iron only with a purpose-built ironing board.

- Observe all ironing instructions and ironing temperature dot settings given by the garment manufacturer. These are normally on a label or labels inside the garment.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- The iron must not be left unattended while it is connected to the mains socket.
- Always ensure the water filling does not exceed the max mark.
- Always unplug the iron when refilling the water reservoir.
- Keep the iron & its cord out of reach of children less than 8 years of age when it is energized or cooling down.


UNPACKING

Remove all packaging from the unit. Retain the packaging. If you dispose of it please do so according to any recycling regulations.

- The Main Unit

If items are missing or damaged, please contact Partmaster (UK only) Tel. 0344 800 3456 for assistance.

PRODUCT OVERVIEW

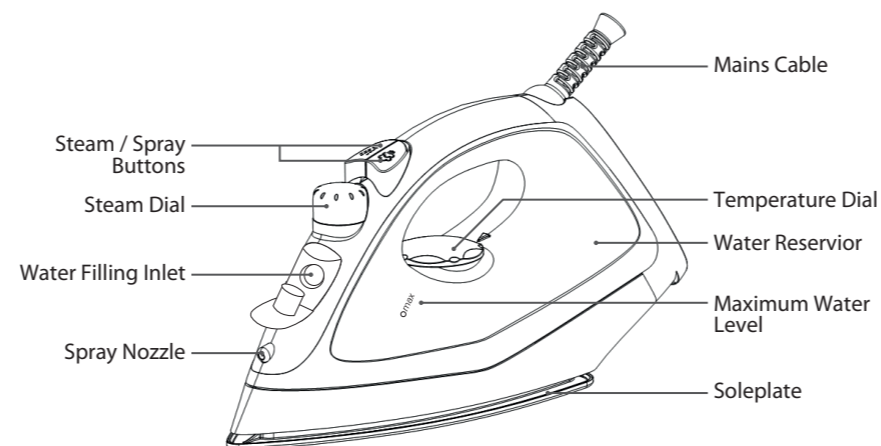

IRONING TEMPERATURES

Check the ironing instructions attached to the article (they are on a label showing a symbol of an iron). Always follow these ironing instructions. The indications on the iron's temperature dial and the table below will help you.

Garment Label	Fabric Type	Thermostat Regulation
	Synthetics	• Low temperature
	Silk/wool	•• Medium temperature
	Cotton/linen	••• High temperature
	Fabric not to be ironed	

If there are no ironing instructions but you know the fabric, then use the table above. The table is valid only for the actual material and does not take account of any finish applied to the fabric. Fabrics to which a finish has been applied (wrinkle relief, printed T shirts etc.) should be ironed at a lower temperature.

If the fabric contains mixed fibres, select the lowest ironing temperature of the composition, e.g. iron a 60% polyester / 40% cotton mix at the temperature indicated for polyester.

The iron heats up quicker than it cools down. Sort fabrics to be ironed into groups according to temperature: wool with wool, cotton with cotton, etc. Start by ironing articles requiring low temperature settings and progress to higher ones.



Do not iron garments that are dirty or stained. The iron's heat may set the stain.

Pure (100%) wool fabrics may be pressed with the iron set to a steam position and the garment protected by a dry cloth.

FIRST TIME USE

Inspect the iron carefully.

Check that the voltage marked on the rating matches your mains voltage.


Remove any protective film from the soleplate. Polish the soleplate lightly with a clean soft cloth to remove any residues.



Maintaining the finish of the iron's soleplate is essential. Keep the soleplate smooth: do not scratch it on metal objects (e.g. the edge of the ironing board, buttons, zippers, etc.) as these may impair performance.

FILLING WITH WATER (FOR STEAM IRON-

1. Make sure the iron is unplugged from the mains socket and the **Steam Dial** is at "0" position.
2. Set the iron to level position, and fill in water through the **Water Filling Inlet**.
3. Clear the water outside of the water reservoir, and when finishing ironing, please empty the water reservoir.
4. If you live in a hard water area, it is advisable to use distilled or de-mineralised water. Avoid using water containing softeners, perfumes or additives.

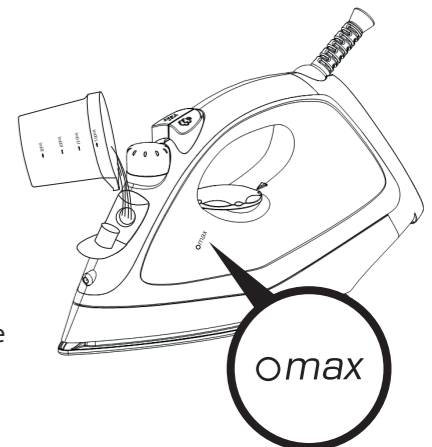

Do not fill the iron above the max mark indicated on the side of the iron.