



Household Appliances

### **Cleaning**

1. Switch the oven/hot plates off, disconnect from the power and allow it to cool down.
2. Always clean the enamelled parts of the oven after each use, and ensure the oven door is left ajar to clear any condensation inside.
3. Clean with a soft cloth, using it damp, if necessary, to remove minor stains.
4. Do not immerse any part of the oven in water and ensure all external connections, switches and sockets are kept dry.
5. Chemicals, detergents or any abrasive cleaning powder, pads or polish of any kind must not be used as they can damage the oven.

### **Disposal Information**



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

Distributed by Stearn Electric Company Ltd  
Votec House, Hambridge Lane, Newbury, Berkshire, RG14 5TN



Household Appliances

## **OPERATING INSTRUCTIONS**



### **STTC26L – Mini Oven with Hotplates**

#### **PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE**

- DO NOT use in a bathroom or near any source of water.*
- DO NOT use your oven outdoors.*
- DO NOT allow the oven or its lead to be submerged in water.*
- DO NOT wrap the power lead around the body of the oven after use.*
- DO NOT operate the oven on any metal surface.*
- DO NOT leave the oven unattended whilst in use.*
- DO NOT leave the hotplates switched on without pots or pans except for pre-heating (maximum 3 minutes).*
- DO NOT touch any of the hot surfaces on the oven or hotplates. Only use the handles and knobs.*
- DO NOT place the oven on or near a gas or electric burner.*

*ALWAYS ensure that the oven is placed on a flat, stable surface with the base properly connected out of the reach of children.*  
*ALWAYS unplug the oven before cleaning.*

*The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock or personal injury.*



Household Appliances

*This appliance is not intended for use by persons including children with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.*

*Children should be supervised to ensure they do not play with this appliance.*

*IMPORTANT – If the mains lead of this appliance becomes damaged then it must be replaced by a suitably qualified person using the same rated cable in order to avoid a hazard.*

**THERE ARE NO USER SERVICEABLE PARTS INSIDE AND THE CASING SHOULD NOT BE OPENED BY AN UNQUALIFIED PERSON**

**THIS APPLIANCE IS INTENDED FOR DOMESTIC USE ONLY**

#### **Electrical Connection**

*Ensure your supply is rated at 220-240v and 50/60Hz before operating the appliance. This oven is fitted with a rewirable plug incorporating a 13amp fuse. In addition this appliance must be earthed or connected to an earthed supply. In the event of the fuse needing replacement then a 13amp fuse approved by ASTA to BS1362 MUST be used.*

*IMPORTANT: If the plug fitted is not suitable for your socket, then the 13amp plug supplied should be removed. Before wiring the appropriate plug, please note that the wires in this mains lead are coloured in accordance with the following code:*

BLUE	- Neutral
BROWN	- Live
GREEN & YELLOW	- Earth

*As the colours in the mains lead may not correspond to the coloured markings in your plug, proceed as follows:*

*Connect the BROWN wire to the terminal marked 'L' or coloured RED, Connect the BLUE wire to the terminal marked 'N' or coloured BLACK, Connect the GREEN & YELLOW wire to the terminal marked 'E' or coloured GREEN or GREEN AND YELLOW. If in doubt consult a suitably qualified electrician.*



Household Appliances

#### **Using your oven**



*Before using the oven for the first time or after storage, operate the oven at the maximum setting for five minutes. Do not place any food in the oven during this period. Some smoke may be generated, this is normal, and will burn off safely within a few minutes.*

1. Place the oven on a stable flat surface out of the reach of children and at least 25cm away from the wall (at the back and sides).
2. Plug into a suitable power outlet, ensuring that the cable is not overstretched or could be accidentally caught.
3. For baking, grilling or both, select the desired temperature (0°C to 250°C) using the top control knob.
4. Set the required switch to **ON** position, either bake, grill or both. The power indicator lights on the switches will illuminate when the oven has reached the desired temperature.

*NOTE: the temperature must be selected first. The bake and grill switches will not operate if the temperature control knob is in the **OFF** position.*

#### **Using your hotplates**

1. Turn the required control knob (middle=left hotplate, bottom=right hotplate) to desired setting (0 to MAX).
2. Place a pot or pan onto the hotplate and commence with cooking.
3. Do not leave the hotplates ON without any pots or pans on them as this may cause the hotplates to overheat and damage the elements.

*The hotplates can be operated at the same time as the oven, but it is recommended that you only use one hotplate at the same time as the oven to prevent your circuit breaker from becoming overloaded. It is possible however to operate both hotplates and the oven simultaneously.*