

# sabichi®


## 2 slice toaster



## Instruction Manual

Product Code: 194596

# COMPONENTS

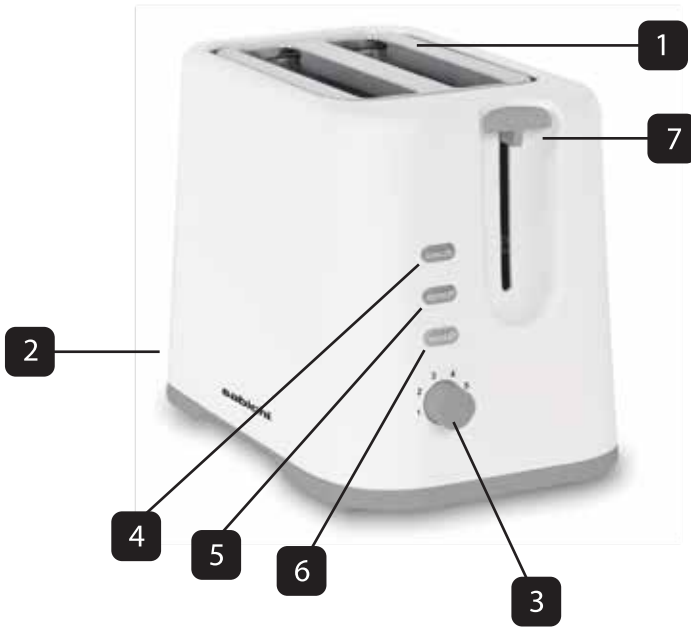

1 - Toasting Slots

2 - Crumb Tray

3 - Browning Control Dial

4 - Cancel Button

5 - Defrost Button

6 - Reheat Button

7 - Carriage Control Lever

Congratulations on your Sabichi purchase! We really hope you enjoy using your new toaster. Please read and retain this instruction manual carefully to reduce the risk of fire, electric shock and/ or injury when using your appliance.

## IMPORTANT INSTRUCTIONS

- To protect against electrical hazard do not immerse any part of the toaster or cord in water or any other liquid.
- Close supervision is necessary when the toaster is near children. This appliance should not be used by children.
- Do not leave the toaster unattended when in use.
- Always use the toaster on a dry, level surface.
- Do not use this toaster outdoors.
- Always unplug from the plug socket when not in use and before cleaning.
- Do not operate the toaster if it malfunctions or it has been damaged in any manner due to misuse. If there is a manufacturing fault, please contact the Homemakers for review.
- In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged in the slightest degree, the entire toaster should be returned to place of purchase for review.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Allow unit to cool before wrapping cord around base for storage.
- If the supply cord is damaged, it must be replaced by a qualified persons in order to avoid a hazard.
- Care must be taken not to touch any hot surfaces, do not store or cover the toaster until it has fully cooled down.
- Do not place this toaster on or near a hot gas or electric burner, in or where it could touch a heated oven, or a microwave oven.
- Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this toaster.
- Caution-bread may burn. When using this toaster, allow adequate air space above and on all sides for air circulation. Do not allow this toaster to touch curtains, wall coverings, clothing, dishtowels or other flammable

materials during use. **CAUTION** is required on surfaces where heat may cause a problem-an insulated heat pad is recommended.

- THIS TOASTER IS FOR HOUSEHOLD USE ONLY. DO NOT USE THE TOASTER FOR ANYTHING OTHER THAN INTENDED USE.
- Do not use the toaster without the slide out crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
- Do not use this toaster with any foodstuff product containing sugar granules or with products containing jam or preserves.
- Bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- This toaster is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should not play with the toaster.
- The temperature of accessible surfaces may be high when the toaster is in operation.

## **WARNING!**

**Never attempt to extract jammed toast, muffins, bagels or any other item with a knife or any other object, as contact with live elements may cause electrocution. Allow the toaster to cool down, unplug and carefully remove the bread using non flammable tongs.**

## **OPERATING YOUR TOASTER**

- Insert the plug into a suitable mains supply socket and turn the power on.
- Place up to two slices of bread, muffins, or bagels into each toasting slots.
- Select the desired browning setting, from No.1 to No.7 on the browning control dial.(No.1 -lightest, No.7-darkest).  
When using the toaster for the first time we suggest you toast on number 3. Varying types of bread and personal preference may require a different browning setting.
- Press the carriage control lever down until it clicks into place. Toasting cycle will automatically commence. Please note: if the toaster is not plugged in and switched on at the power point the carriage control lever will not click into place.
- The toaster turns off when the desired toasting level is achieved and automatically raises the toast. The toasting process can be stopped at any time by pressing the cancel button.

**TOASTING FROZEN BREAD:** To toast frozen bread, place the bread into the bread slots and select the desired browning setting. Press the carriage control lever down until it clicks into place then press the Defrost Button.

REHEATING TOAST: The toaster allows you to reheat toast without additional toasting. To reheat, place toast into bread slots, lower the carriage control lever until it clicks into place and press the Reheat Button.

In the unlikely event that the bread or crumpet becomes jammed, switch the toaster off at the power outlet, remove the plug from the supply socket and carefully ease the bread out of the toaster using non flammable tongs, ensuring that you do not damage the element.

## CARE AND CLEANING

- Always turn the power off, remove the plug and allow the toaster to cool before cleaning.
- To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty and replace in the toaster before using it again.
- Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth.
- Do not immerse the toaster in water.
- To clean the interior, turn the toaster upside down over the sink and shake crumbs free.

**The crumb tray should be cleaned regularly.**

**Do not allow breadcrumbs to accumulate in the bottom of the toaster.**

# TECHNICAL DETAILS

AC: 220-240V~

50/60Hz

Power: 730-870W

## WASTE DISPOSAL

According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated.

If at any time in the future you need to dispose of this product please do NOT do so with household waste.

Please send this product to WEEE collection points where available.



# sabichi®

**sabichi homewares ltd**

UB6 7JD

[www.sabichihomewares.com](http://www.sabichihomewares.com)  
[thhomemakers@sabichi.co.uk](mailto:thhomemakers@sabichi.co.uk)